

Device Brand Code List

TV

ACER	0753
ACME	0011
ADA	0018
ADC	0006 0007
ADMIRAL	0000 0001 0002 0047
AGAZI	0002
AGB	0123
AIKO	0004 0009
AIWA	0291
AKAI	0004 0006 0009 0011 0051 0068 0069 0086 0169 0736
AKIBA	0011
AKURA	0002 0009 0011 0074 0169
ALBA	0009 0011 0027 0028 0047 0068 0083 0169 0245
ALKOS	0164
ALLORGAN	0026 0157
ALLSTAR	0051
ALTUS	0042
AMSTRAD	0002 0009 0011 0013 0030 0068 0069 0074 0123
ANAM	0009 0109
ANGLO	0009
ANITECH	0002 0009 0043 0109
ANSONIC	0009 0014
ARC EN CIEL	0045 0126 0139
ARISTONA	0051 0169
ARTHUR MARTIN	0158
ASA	0000 0016 0017 0018 0110
ASBERG	0051 0043
ASTRA	0009
ASUKA	0002 0011
ATLANTC	0051 0157 0169
ATORI	0009
AUDIOSONIC	0009 0011 0051 0090 0139 0157 0169 1062
AUSIND	0043
AUTOVOX	0000 0002 0043 0157
BAIRD	0111 0139 0245
BANG & OLUFSON	0000
BARCO	0112
BASIC LINE	0009 0011 0051 0245
BAUR	0169
BEKO	0007 0042 0083 1064
BEON	0051 0169
BEST	0113
BESTAR	0051 0245
BLACK PANTHER LINE	0245
BLAUPUNKT	0002 1172

Device Brand Code List

BLUE SKY	0011
BLUE STAR	0120
Bosun/Foresee	1024
BPL	0120
BRANDT	0045 0046 0126 0127 0139
BRION VEGA	0000 0051 0169
BROKSONIC	0920
BRUNS	0000 0007
BSR	0026
BTC	0011
BUSH	0009 0011 0024 0027 0028 0051 0062 0068 0107 0115 0120 0139 0167 0169 0245
CAPSONIC	0002
CARREFOUR	0027
CASCADE	0009
CATHAY	0051 0169
CENTRUM	0205
CENTURION	0051 0169
CENTURY	0000
CGE	0043 0047
CIMLINE	0009 0028
CITY	0009
CLARIVOX	0169
CLATRONIC	0002 0009 0011 0030 0043 0051 0083
CONCORDE	0009
CONDOR	0051 0083 0245
Conic/Scope	1025
CONRAC	0726
CONTEC	0009 0027 0029 0030
CONTINENTAL EDISON	0045 0046 0111 0126 0139
COSMEL	0009
CROSLEY	0000 0043
CROWN	0009 0043 0047 0051 0083 0121 0169 0245
CS ELECTRONICS	0011
CTC CLATRONIC	0014
CYBERCOM	0002 0009 0038 0042 0047 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0228 0291 0924
CYBERMAXX	0002 0009 0015 0038 0042 0047 0048 0049 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0218 0228 0291 0894 0924 1005
CYBERTRON	0011
CYTRON	0009 0015 0038 0042 0047 0048 0049 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0218 0228 0291 0864 0924 1005

Device Brand Code List

DAEWOO	0009 0051 0059 0061 0067 0085 0088 0115 0131 0191 0245
DAINICHI	0011
DANSAI	0002 0051 0169
DANTAX	0113 0169
DATSURA	0121
DAYTON	0009
DAYTRON	0245
DCE	0042
DE GRAAF	0006 0033
DECCA	0004 0030 0051 0123 0169
DECCACOLOR	0015
DELL	0025
DESMET	0051 0169
DIGITOR	0227 0228
DIXI	0009 0051 0169
DR HD	0134 0138 0142 0143 0148
DTS	0009
DUAL	0002 0009 0038 0042 0047 0068 0089 0103 0107 0115 0126 0127 0139 0169 0206 0207 0208 0210 0228 0291 0924
DUAL-TEC	0009
DUMONT	0000 0014 0017 0018
DURABRAND	0228 1006 1008 1019 1020 1073
DUX	0169
DVICO	0276
DYNATRON	0051 0169
ELBE	0157
ELCIT	0000
ELECTRO TECH	0009
ELEKTA	0120
ELIN	0016 0018 0051 0169
ELITE	0011 0051
ELMAN	0014
ELTA	0009
EMERSON	0000 0127
EMGETON	0200 0243 0255
Energy Sistem	1038 1039
ERAE	1003
ERRES	0169 0051
ESC	0245
ETRON	0009
EURO-FEEL	0002
EUROLINE	0149
EUROMANN	0002 0051
EUROPHON	0051 0123
EUSTON	0077 0080 0095 0118 0125 0129
EXPERT	0157

Device Brand Code List

FAIRTEC	0746
FENNER	0009 0115
FERGUSON	0050 0052 0079 0100 0111 0127 0163 0169
FIDELITY	0068 0074 0096
FINLANDIA	0006 0110
FINLUX	0000 0004 0014 0016 0017 0018 0042 0043 0051 0110 0123 0157 0167 0169
FIRSTLINE	0009 0026 0051 0062
FISHER	0000 0006 0018 0027 0029 0040 0083
FLINT	0051 0113
FORMENTI	0000 0001 0043 0169
FORTRESS	0001 0000
FRONTECH	0002 0009 0068 0120
FUJITSU	0004 0116 0157
FUNAI	0002 0026
GALAXY	0047 0083
GBC	0009 0027
GEC	0004 0041 0051 0123 0169
GELOSO	0009
GENERAL TECHNIC	0009
GENEXXA	0011 0051
GERICOM	0049 1023 1064
GOLDEN INTERSTAR	0177
GOLDSTAR	0009 0051 0084 0093 0169 0261
GOODMANS	0002 0004 0009 0027 0028 0051 0068 0093 0111 0115 0127 0169 0245
GORENJE	0083
GPM	0011
GRANADA	0004 0006 0016 0027 0031 0040 0043 0051 0054 0064 0123 0127 0169
GRANDIN	0009 0011 0120 0169 0245
GRUNDIG	0017 0043 0087 0091 0097 0117 0136
GS	0194
H&B	0228
HAAz	0228
HALIFAX	0002
HANSEATIC	0007 0009 0026 0027 0051 0083 0169
HANTAREX	0009 0123
HB	0015 0042 0703 1003
HCM	0002 0009 0074 0120
HIFIVOX	0139
HINARI	0006 0009 0011 0027 0043 0051 0137 0169 0248
HISAWA	0011 0113 0120
HISENSE	0156 0746 1027
HITACHI	0004 0016 0023 0027 0033 0041 0045 0046 0047 0059 0065 0076 0083 0123 0139 0140 0144 0213 1013

Device Brand Code List

HORNYPHON	0051
HOSHAI	0011
HPC	1026
HUANYU	0115
HYPER	0009
HYPSON	0002 0051 0120 0169
HYUNDAI	1010
ICE	0002 0009 0011 0051 0068
IMPERIAL	0043 0047 0051 0083
INDESIT	0024
INDIANA	0051 0169
INGERSOL	0009
INNO HIT	0004 0009 0011 0051 0093 0123 0169 0245
INNOVATION	0002 0009 0068 0103 0107 0111 0115 0169 0291
INTERBUY	0009 0109
INTERFUNK	0000 0051 0139 0169
INTERTRONIC	0894
INTERVISION	0002 0014 0109
IRRADIO	0009 0011 0051 0068 0169
ISUKAI	0011
ITS	0011 0051 0068 0120
ITT	0009 0031 0143
ITV	0009 0086 0169 0245
JACKTOP	0073
JEC	0164
Jeja	1029
Jinpin	1028
Jointek	1030
JVC	0027 0051 0065 0067 0068 0088
KAISUI	0009 0011 0120
KAPSCH	0157
KARCHER	0006 0016 0169
KATHREIN	0199
KENDO	0014 0028 0245
KENNEDY	0157
KING TV	0015
KNEISSEL	0174
KOLSTER	0051
KONKA	0011 0047 0068 1037
KORPEL	0051 0169
KORTING	0000
KOYODA	0009
KURO	0121
LENCO	0009 0245
LENOIR	0009
LEYCO	0002 0004 0026 0051 0169

Device Brand Code List

LG	0009 0051 0059 0061 0067 0079 0081 0084 0085 0093 0119 0133 0135 0169 0261
LIESENK	0169
LIFE	0002 0009 0068 0103 0107 0111 0115 0169 0291
LIFETEC	0002 0009 0015 0038 0042 0047 0048 0049 0058 0061 0068 0085 0088 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0218 0228 0291 0894 0924 1005
LOEWE	0000 0051 0098 0169 0734
LOGIK	0030
LUMA	0157 0169
LUMATRON	0002 0051 0074 0107 0157 0169 0245
LUX MAY	0051
LUXOR	0047 0093
MAGNADYNE	0000 0014 0123 0169
MAGNAFON	0014 0043 0123
MAGNUM	0002 0009 0068 0103 0107 0111 0115 0169 0291
MANDOR	0002
MANESTH	0002 0028 0051 0169
MARANTZ	0051 0169
MARELLI	0000
MARK	0051 0169
MATSUI	0002 0004 0009 0013 0026 0027 0028 0030 0051 0068 0091 0113 0123 0147 0164 0169 0173 0180
MCMICHAEL	0041
MEDIATOR	0051 0169
MEDION	0002 0009 0015 0038 0042 0047 0048 0049 0058 0061 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0218 0228 0291 0624 0726 0731 0751 0894 1005 1014
Mein	1031 1032 1333
MELECTRONIC	0009 0016 0018 0051 0068 0109 0110 0115 0139 0169
MEMOREX	0009 0920
MEMPHIS	0004 0009
METZ	0000 0075 0151 0152
MICROMAXX	0002 0009 0015 0038 0042 0047 0048 0049 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0218 0228 0291 0864 0924 1005
MICROSTAR	0002 0009 0015 0038 0042 0047 0048 0049 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0228 0280 0291 0894 0924 1005
MINERVA	0017

Device Brand Code List

MINOKA	0051
MITSUBISHI	0000 0027 0030 0051 0054 0060 0098 0205
MIVAR	0043 0055 0083 0093 0123
MOTION	0043
MTLOGIC	0090 1062
MULTISYSTEM	0169
MULTITECH	0009 0014 0027 0043 0045 0169
MURPHY	0018
NATIONAL	0064
NEC	0027 0056 0185 0752
NECKERMANN	0000 0051 0083 0169
NEI	0051 0068 0169 0113
NEW WORLD	0011
NEWTECH	0009 0051
NIKKAI	0002 0004 0011 0051 0164 0169
NOBLIKO	0014 0043
NOGAMATIC	0139
NOKIA	0031 0141
NORDMENDE	0000 0024 0045 0046 0051 0111 0126 0127 0139 0719
NORDVISION	0169
OCEANIC	1015
OKANO	0083
ONWA	0069
OPENBOX	0162
ORBIT	0051
ORION	0009 0013 0026 0028 0030 0051 0062 0075 0123 0147 0169 0212 0920
OSAKI	0002 0004 0011 0074
OSO	0011
OSUME	0004 0029
OTTO VERSAND	0001 0027 0051 0111 0120 0121 0139 0169
PACKARD BELL	0203
PALLADIUM	0083
PANAMA	0002 0009
PANASONIC	0064 0072 0124 0151 0152 0197
PANK	0017 0027
PATHE CINEMA	0083
PATHE MARCONI	0045 0046 0126 0139
PAUSA	0009
PERDIO	0004
PHILCO	0000 0043 0047
PHILIPS	0000 0020 0041 0043 0051 0083 0089 0111 0115 0169 0339 0044 0053 0057 0059 0067 0079 0130
PHOCUS	0042 1064
PHOENIX	0000 0051 0169
PHONOLA	0000 0051 0169

Device Brand Code List

PIONEER	0051 0067 0076 0079 0139 0145 0169
PLANTRON	0002 0051
POPPY	0009
PORTLAND	0245
PRANDONI-PRINCE	0123
PRIMA	0009
PRINZ	0047
PRO2	0002 0009 0015 0038 0042 0047 0048 0049 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0218 0228 0291 0894 0924 1005
PROFEX	0009 0043
PROFI-TRONIC	0051
PROLINE	0004 0051 0062
PROSONIC	0015 0042 0068 0107 0169 0245
PROTECH	0002 0009 0014 0051 0113 0169
PROVIEW	0751
PROVISION	0015 0169
PYE	0051 0068 0169
PYMI	0009
QUELLE	0002 0016 0017 0018 0026 0030 0051 0136 0169
QUESTA	0027
R LINE	0051 0169
RADIOLA	0051 0169
RADIOMAPRELLI	0000 0123
RADIONETTE	0016 0018
RADIOTONE	0007 0051
RBM	0017
RCA	0031
REVOX	0051 0169
REX	0002 0157
RFT	0000 0007
ROADSTAR	0002 0009 0011 0245
ROBOTRON	0000
RTF	0000
SABA	0000 0045 0046 0111 0123 0126 0127 0139 0245
SAISHO	0002 0009 0013 0028 0123
SALORA	0031 0047 0093 0107 0121
SAMBERS	0014 0043 0123 0169
SAMSUNG	0002 0004 0009 0030 0051 0058 0059 0061 0066 0067 0079 0081 0083 0085 0090 0093 0105 0114 0135 0312 1042 0198
SANDRA	0009
SANSUI	0051 0920
SANYO	0004 0006 0016 0018 0027 0029 0030 0031 0040 0043 0059 0065 0066 0083 0101 0127

Device Brand Code List

SBR	0041 0169
SCHAUB LORENZ	0697 0698 0703 0715 0015 0042 0096 0205 1003
SCHNEIDER	0011 0051 0068 0139 0169 0245
Scope	1035 1036
SEG	0002 0009 0014 0027 0043 0169 1014
SEI SINUDYNE	0000 0013 0014 0026 0075 0123
SELECO	0027 0157
SENCORA	0009
SENTRA	0164
SHARP	0001 0027 0029 0065 0099 0141 0187
SHORAI	0026
SIAREM	0000 0014 0123
SIEMENS	0029
SIENWAY	0120
SIERRA	0051
SILVER	0027
SINGER	0000 0014 0228
SINUDYNE	0000 0013 0014 0015 0026 0028 0075 0169
SKYMASTER	0016
SKYWORTH	0228 1034
SOLAVOX	0092
SONITRON	0006 0031
SONOKO	0002 0009 0051 0169 0245
SONOLOR	0006
SONTEC	0051 0169
SONY	0004 0009 0027 0029 0030 0061 0065 0066 0094 0106 0127 0146 0183
SOUND&VISION	0011 0014
SOUNDWAVE	0051 0369
STANDARD	0009 0011 0051 0245
STARLIGHT	0169
STERN	0157
SUNKAI	0009 0026 0062
SUNWOOD	0009 0051
SUPRA	0009
SUSUMU	0011
SUTRON	0009
SYSLINE	0169
TANDBERG	0026 0157
TANDY	0001 0004 0011
TARGA	0185 1003 1004 1018
TASHIKO	0027 0041 0056
TATUNG	0004 0051 0123 0169
TCM	0002 0009 0042 0047 0068 0103 0107 0115 0127 0169 0185 0206 0207 0208 0209 0210 0211 0228 0291 0742 0924 0994 1005 1017
TEC	0009

Device Brand Code List

TECHNISSON	0042
TELEAVIA	0045 0111 0126 0139
TELEFUNKEN	0050 0051 0052 0067 0076 0078 0102 0105 0111 0126 0127 0139 0163 0190
TELETECH	0009 0113 0169
TELETON	0157
TENSAI	0011 0018 0026 0051
TESMET	0051
TEVION	0051
TF	0003 0010 0019 0021 0035 0037 0039 0063
THOMSON	0045 0046 0050 0051 0052 0102 0111 0126 0127 0139 0163 0176 0185 0245 0723
Thomson 3004	1040 1041
THORN	0004 0018 0054 0111 0127 0164 0169
TOKAI	0004 0051
TOMASHI	0120
TOSHIBA	0017 0027 0065 0082 0094 0108 0117 0122 0128 0132 0164 0189 0920
TRIUMPH	0013 0082 0123
UHER	0043 0051 0157
ULTRAVOX	0000 0014 0133
UNITED	0169
UNITED QUICK STAR	0245
UNIVERSUM	0002 0016 0018 0051 0083 0102 0110 0143 0169
VESTEL	0051 0083 0092 0103 0107 0169 0195 1014 0067 0079 0361 0410
VEXA	0009 0169
VICTOR	0027 0051
VIDEO SYSTEM	0051
VIDEOCON	0737
VIDEOL OGIQUE	0011
VISION	0051
VISOREX	0096
VIZIO	0343
VORTEC	0051 0169
VOXSON	0000 0043 0051
WATSON	0051 0067 0079 0088 0169
WATT RADIO	0014
WEGA	0000 0027
WELLTECH	0042
WELTBlick	0051 0169
WHITE WESTINGHOUSE	0014 0043 0169
YAKUMO	1012
YINHE	0728
YOKO	0002 0009 0011 0051 0169
YORX	0011
ZANUSSI	0157

Device Brand Code List

SAT

253	1151
441250	1158
441400	1091
441408	1092
703019	1180
(Re)playBOX	1157
505/90004228	1113
703019 MediaPrice	1172
AccessBOX	1152
ADECQ	0660
ALBA	0405 0407 0508 0562
ALDES	0408 0409
ALLSAT	0462
ALLSONIC	0408
AlterBOX	1185 1194
AMPERE	0422
AMSTRAD	0417 0419 0541 0555
ANKARO	0408
ANTTRON	0405 0407
APOLLO	0405
ARCON	0422 0887 0888 0914
ARENA	0552
ARION	0593
ARMSTRONG	0419
AST	0435
ASTON	0406 0594
ASTRA	0196 0201 0216 0249 0274 0419 0431 0432 0502
ASTRO	0192 0193 0241 0246 0249 0290 0407 0409 0439 0569
AUDIOTON	0407 0462
AURORA	0602
AUSTAR	0602 0642 0655 0658
Austar Digital	1116 1117
AXIS	0432 0456
BEST	0428
BLAUPUNKT	0439
BOCA	0419 0502
BRAIN WAVE	0444 0975
BRANDT	0565 0566 0574
BSKYB	0555
BT SATELLITE	0574

Device Brand Code List

BUSH	0508 0562
CANAL SATELLITE	0569
CANAL+	0569
CHAPARRAL	0507
CHESS	0547 0586
CITYCOM	0459 0508 0640
CLATRONIC	0444
CLEMENS KAMPHUS	0491
CNT	0409
COLUMBUS	0477
COMAG	0471 0567 0570 0585 0638
COMMLINK	0408
COMTECH	0456
CONDOR	0640
CONNEXIONS	0438 0454
CONRAD	0640
CONTEC	0456 0459
COSAT	0462
CROWN	0419
CSN	1191
CYBERCOM	0423 0442 0493 0504 0511 0514 0566 0586 0587 0619
CYBERMAXX	0423 0442 0478 0493 0504 0511 0514 0535 0566 0586 0587 0619 0644 0650 0933 0947 0983
CYTRON	0423 0442 0478 0493 0504 0511 0514 0535 0566 0586 0587 0619 0644 0650 0933 0947 0983
DAERYUNG	0438
D-BOX	0604
DECCA	0460
DEW	0456
DIAMOND	0461
DIGIALITY	0640
DIGITAL BOX	0005 0008 0012 0022 0032 0034 0036
DIGITAL M SERIE	0621
DirectBOX3	1177
DISKXPRESS	0454
DITRISTRAD	0462
DNT	0438
Dr.HD	0134 0138 0142 0143 0148
DRAKE	0557
DStv	0602
Dti 1000 (Thomson)	1164
DUAL	0423 0493 0504 0511 0514 0566 0586 0587
Dualis	1156
DualisBOX	1175

Device Brand Code List

DualstreamBOX	1184
DVICO	0276
DVR01/EH-M1	1189
E177/SM-013	1102
easy 2 / Prem 3	1173 1174
ECHOSTAR	0425 0464 0465 0481 0578 0579 0580 0581 0586 0640 0657 0659
EINHELL	0405 0408 0417 0419
ELEKTA	0409
ELLIES	1118 1119
ELTA	0405 0462
EMANON	0405
EMGETON	0200 0243 0255
EMME ESSE	0491 0508
EMTECH	0877
Energy Sistem	1123
ENIGMA	0618
EP SAT	0401 0508
E-TEK	0926
EUROPHON	0640
EUROSAT	0196 0419
EUROSKY	0196 0229 0230 0246 0249 0419 0640
EUROSTAR	0438 0419
EUSTON	0077 0080 0095 0118 0125 0129
EVA	0588 0589
EXATOR	0405 0407
FERGUSON	0226 0324 0472 0473 0508 0603
FIDELITY	0417
FINLANDIA	0508
FINLUX	0370 0475 0480 0508 0608
FINNSAT	0456 0603
FORCE	0535 0577
FORTEC STAR	0470
FOXTEL	0373 0602
Foxtel IQ	1115
FRACARRO	0562
FRANCE SATELLITE/TV	0477
FREEBOX	1090
FREECOM	0405 0489
FTE	0422 0496
FUBA	0405 0431 0438 0439 0477 0480 0552
FUNTACH	0587
GALAXIS	0408 0432 0456 0462 0478 0535 0602 0619
GLOBECAST	0922

Device Brand Code List

GMI	0419
Golden Interstar	0177
GOLDSTAR	0489
GOODING	0483
GOODMANS	0508
GRANVISION	0582 0583
GROTHUSEN	0405 0489
GRUNDIG	0363 0364 0407 0438 0439 0483 0495 0508 0602
GS	0194
HANDAN	0547
HANSEATIC	0504
HANTOR	0405 0444
HANURI	0409
HB	0877
HD	1190
HD80-2T	1170
HEAD	0635
HELIOCOM	0422
HIRSCHMANN	0439 0488 0491 0522 0547 0558 0863 0880
HISAWA	0444
HITACHI	0508 0537
HOMECAST	0552 0553
HOUSTON	0462
HUMAX	0485 0517 0630 0643 0645 0649
HUTH	0408 0411 0419 0444 0462 0491
Hysis	1154 1155
HYUNDAI	0486
IMPERIAL	0562
INNOVATION	0493 0504 0511 0586 0587
INTERTRONIC	0419
INTERVISION	0462
IRDETO	0602
ITD(Sagem)	1166 1179
ITT/NOKIA	0454 0508 0537
JACKTOP	0073
JOHANSSON	0444
JSR	0462
JVC	0483
KATHREIN	0204 0219 0220 0229 0241 0256 0273 0290 0297 0304 0316 0319 0439 0459 0496 0507 0550 0607 0617 0631 0199
KOSMOS	0407 0489 0491 0496
KREISELMEYER	0439
KYOSTAR	0405
LASAT	0409 0502 0565 0566 0889

Device Brand Code List

LENCO	0405 0489
LENG	0444
LENNOX	0462
LG	0215 0345 0489
Liberty	1178
LIFESAT	0217 0223 0225 0230 0237 0248 0423 0442 0493 0504 0511 0514 0566 0586 0587 0619
LIFETEC	0217 0223 0225 0423 0442 0478 0493 0504 0511 0514 0535 0566 0586 0587 0619 0644 0650 0933 0947 0983
LORRAINE	0489
LUXOR	0417 0537
MACAB	0603
MANHATTAN	0409 0421 0462 0508 0557 0633
MARMITEK	0641
MASCOM	0409
MASPRO	0483 0507 0508 0558
MATSUI	0483 0574
MB	0504
MBOX	0442
MEDIABOX	0569
MEDIAMARKT	0419
MEDIASAT	0432 0569
MEDION	0217 0223 0225 0230 0423 0442 0478 0493 0504 0511 0514 0535 0566 0586 0587 0619 0639 0644 0650 0840 0933 0947 0983
METRONIC	0188 0192 0193 0232 0260 0270 0283 0290 0405 0407 0408 0409 0575 0612 0613 0614 0615 0632
METZ	0439
MICROMAXX	0423 0442 0478 0493 0504 0511 0514 0535 0566 0586 0587 0619 0644 0650 0933 0947 0983
MICROSTAR	0423 0442 0478 0493 0504 0511 0514 0535 0566 0586 0587 0619 0644 0650 0933 0947 0983
MINERVA	0439 0483
MITSUBISHI	0439 0508 0574
MITSUMI	0502
MORETV	0423 0644 0840 0983
MORGAN SYDNEY	0611
MORGANS	0419 0502 0611
MULTICHOICE	0602
MULTISTAR	0496
MULTITEC	0586 0587
MURATTO	0437 0489
NAVEX	0444
NEC	0509 0510
NEOM	1193
NetboxHD	1186

Device Brand Code List

NEUF	1089
NEXTWAVE	0414
NIKKO	0419
NMEUHAUS	0432 0462
NOKIA	0425 0454 0508 0541 0563
NOMEX	0622
NORDMENDE	0405 0409 0472 0508 0603
NOVIS	0444
OCEANIC	0461
OCTAGON	0405 0407 0456
OKANO	0419 0491 0496
OPENBOX	0162
OPTEX	0204 0214 0459 0462 0656 1192
OPTUS	0602
ORANGE	1088
ORBIT	0435
ORBITECH	0405
OSAT	0407
OTTO VERSAND	0439
Ouralis Ev 2	1153
PACE	0256 0273 0306 0323 0439 0508 0527 0555 0559 0617
PACIFIC	0461
PALCOM	0431 0477
PALLADIUM	0419 0483
PALTEC	0431
PANASONIC	0508 0542
PANDA	0508
PANSAT	0490
PANTECH	0591
PBI	0933
PHILIPS	0359 0364 0371 0436 0455 0456 0483 0493 0495 0508 0515 0543 0561 0569 0574 0605 0615
PHOENIX	0456
PHONOTREND	0408 0462 0491
PINNACLE	0654
PIONEER	0363 0569
Player	1181
Plug-in	1168 1183
POLSAT	0603
POLYTRON	0459
PREDKI	0444
PREMIER	0569
Premier 2	1169
PREMIERE	0442 0462 0542 0569

Device Brand Code List

PREMIUMX	0969
PRIESNER	0445 0419
PRO2	0423 0442 0478 0493 0504 0511 0514 0535 0566 0586 0587 0644 0650 0933 0947 0983
PROMAX	0508
PROSAT	0408 0562
PROTEK	0461
PROVISION	0409
QUADRAL	0408
QUELLE	0439 0417
QUIERO	0603
RADIX	0438 0632
RAINBOW	0407
REDIFFUSION	0510
REDPOINT	0432
RFT	0408
RT850S : ORT8800	1167
SAB	0905 0906 0914 0915 0947
SABA	0409 0472 0506 0543 0556 0562 0565 0571 0572 0573 0574 0575
SABRE	0508
SAGEM	0603 0648
Sagem TNSAT	1187
SAKURA	0456
SALORA	0509 0527
SAMSUNG	0188 0302 0346 0347 0405 0426 0198
SAT	0435 0437
SATCOM	0504 0640
SATEC	0508
SATPARTNER	0405 0407 0409 0444 0489 0491
SCHAUBLORENZ	0877 0906
SCHNEIDER	0455 0511 0586 0587
SCHWAIGER	0204 0205 0217 0224 0230 0237 0248 0249 0270 0285 0411 0430 0433 0440 0459 0504 0508 0514 0566 0573 0575 0576 0577 0587 0598 0616 0631 0633 0865 0886 0906 0971 0974
SEEMANN	0419 0432 0438
SEG	0405 0444 0504 0541 0631 0634
SELECO	0462
SEZAM 7700	0070
SEZAM 7900	0071
SILVA	0489
Single	1162
SKARDIN	0432 0586 0875
SKY	0264
SKY DIGITAL	0555

Device Brand Code List

SKY+	0555
SKYMASTER	1094 1096 1097 1098 1124 1125 1126 1127 1128 1129 1130 1131
SKYMASTER	1132 1133 1134 1135 1136 1137 1138 1139 1140 1141 1142 1143 1144 1145 1146 1147 1148 1149 1150 0408 0504 0506 0547 0586 0587 0588 0589 0590 0591 0592 0874 0875 0876 0877 0926 0933 0192 0217 0225 0237 0248 0283 0293 0317 0678 1095 1099 1100 1101 1114 1093 1103 1104 1105 1106 1107 1108 1109 1110 1111 1112
SKYVISION	0462
SM	1099 1100 1101 1114 1093 1107
SM ELECTRONIC	0408 0504 0506 0547 0586 0587 0588 0589 0591 0592 0678 0874 0875 0876 0877 0926 0933
SMART	0582 0604 0606 0609 0618 0621
Smart	1182
SME	0664 0665 0670 0676 0678 0679 0693 0696
SONY	0379 0418 0446 0569
SR	0419 0472 0502
SRT5119 + Systec	1165
STAR TRAK	0405
STARLAND	0586
STARRING	0444
STRONG	0188 0192 0215 0221 0266 0272 0405 0407 0454 0489 0545 0562 0602
Strong TNSAT	1188
SUMIDA	0419
SUNSTAR	0419 0502 0527
TANDBERG	0603
TANDY	0407
TANTEC	0477 0508
TATUNG	0460
TCM	0423 0442 0493 0504 0511 0514 0566 0586 0587 0619
TECHNISAT	0202 0237 0246 0296 0438 0529 0548 0569 0623
TECHNOMATE	0441 0923
TECHNOTREND	0564
TECO	0419 0502
TELASAT	0640
TELEFUNKEN	0188 0222 0256 0405 0508 0565 0566 0574
TELEKA	0407 0419 0439 0640
TELEMASTER	0409
TELESAT	0504
TELESTAR	0569
TELEVES	0508 0610 0611
TELEWIRE	0462
TEVION	0217 0223 0225 0423 0442 0478 0493 0504 0507 0511 0514 0535

Device Brand Code List

	0565 0619 0644 0650 0926 0933 0947 0983
TF	0003 0010 0019 0021 0035 0037 0039 0063
THOMSON	0472 0492 0508 0568 0569 0574 0601 0603
THORENS	0461
THORN	0473 0505
TIOKO	0459
TONBURY	0445 0874
TONNA	0462 0508
TOPFIELD	0505 0506 0531 0546
TouchBOX	11591160
TPS	1195
TPS PLATINUM	0862
TRIAD	0435 0437 0489 0533
TRIASAT	0480
TRIAx	0439 0565 0619
Twin 2	1163
Twinbox	1161
TWINNER	0610 0611
UEC	1120 1121
UltimateBOX	1176
UNIDEN	0534
UNISAT	0419 0456
UNITOR	0444
UNIVERSUM	0439 0475 0483
VANTAGE	0637
VARIOSTAT	0439
VESTEL	0361 0410
VIA DIGITAL	0568
VIA SAT	0568
VIASAT	1122
VISIOSAT	0444 0462 0586 0594 0595 0596 0597
VIVANCO	0536 0624
VIZIO	0343
VORTEC	0405
V-TECH	0435 0437 0515 0537
WEVASAT	0508
WEWA	0508
WINERSAT	0444
WISI	0435 0437 0438 0439 0508 0529 0533 0538 0539 0540 0597 0625 0626 0627 0628
WOORISAT	0409
XL	1107
Yamaha	1171
ZEHNDER	0409 0437 0496 0541 0582 0583 0631 0632

Device Brand Code List

ZODIAC	0407
--------	------

DVB

ALBA	0451 0646
BUSH	0451
CANAL+	0846
CYBERMAXX	0648 0650
CYTRON	0648 0650
DIGIFUSION	0647
DIGIO2	0892
DURABRAND	0526
ECHOSTAR	0857
FREEVIEW	0447 0451 0453 0482 0513 0526 0532 0600
GERICOM	0443
GOODMANS	0451 0526
GOODWAY	0878 0879
GRUNDIG	0873
HAUPPAUGE	0482
HITACHI	0526
HUMAX	0051
LABGEAR	0513
LIDCOM	0451
LIFETEC	0650
MATSUI	0451 0526
MEDION	0650
MICO	0965
MICROMAXX	0650
MICROSTAR	0650
NOKIA	0531
OGGLE	0951
ON-DIGITAL	0527 0620
OPTEX	0656
PACE	0453 0527
PACIFIC	0526
PANASONIC	0072
PHILIPS	0600
PIONEER	0620
PREMIERE	0600
PRO2	0650
REBOX	0476
SAGEM	0648 0913
SKARDIN	0656
SKYMASTER	0656 0880
SM ELECTRONIC	0656 0878 0879 0880

Device Brand Code List

SONY	0447
TCM	0994 1017
TEVION	0650
THOMSON	0532
TOP-UP TV	0527 0657
YUNG FU	0869

CableBox

AUSTAR	0494
BT	0554
CABLECRYPT	0474
CABLETIME	0448 0449 0450
CANAL PLUS	0474
CLYDE CABLEVISION	0452
COMCRYPT	0474
EURODEC	0603
FILMNET	0474
FILMNET CABLECRYPT	0474
FILMNET COMCRYPT	0474
FOXTEL	0602
GEC	0452
GI	0494 0554
IMPULSE	0554
JERROLD	0494 0554
KABELVISION	0554
MELITA	0554
MNET	0474 0602
MOTOROLA	0494
MOVIE TIME	0551
MULTICHOICE	0474 0602
NOOS	0913
NUMERICABLE	0603
OPTUS	0494
PIONEER	0518 0521
PVP	0554
SAMSUNG	0902
SCIENTIFIC ATLANTA	0524 0525
STS	0551
TELE+1	0474
TELEPIU	0474
TELEWEST	0554
UNITED	0554
UPC	0913
VISIONETICS	0836

Device Brand Code List

DVD

ACCOUSTIC SOLUTIONS	0350 0383
AEG	0333 0894
AFREEY	0386
AIRIS	0357
AIWA	0377 0383
AKAI	0333 0350 0369 0382 0894
ALBA	0350 0351 0357 0381 0384
ALL-TEL	0333
AMES	0383
AMSTRAD	0350
AMW	1053
ANABA	0961
ANSONIC	0356
APEX	0357 0384 0390 0911 0921 0949 1072
ASPIRE	0952
AUDIOSONIC	0382 1062
AUDIOVOX	0942
AXION	0942
B & K	0978
BAIER	0349
BAZE	0357
BEKO	1064
BLACK DIAMOND	0350
BLAUPUNKT	0384
BLU RAY	0831 1087
BLUE NOVA INTERNATIONAL	1051
BLUE SKY	0350 0357
BOMAN	0351 0894
BRANDT	0360 0362
BRITANIA	0830
BROKSONIC	0920 0967
BUSH	0350 0356 0381 0382 0384
CONTEL	0894
CAMBRIDGE	0376
CELESTIAL	0357
CENTREX	0357
CENTRIOS	0932 0954 0955
CENTRON	0932
CENTRUM	0350 0927 0928
CINETEC	0350
CLASSIC	0383
CLATRONIC	0357 0894
COBY	0332 0357 0916 0946 0948 1051
CONTEL	0794
CRITERION	0344

Device Brand Code List

CROWN	0382
C-TECH	0341
CURTIS	0948 0950
CYBERCOM	0330 0334 0338 0339 0341 0342 0344 0352 0356 0358 0372 0924 0932 0930
CYBERHOME	0912 0985 1075
CYBERLINK	1002
CYBERMAXX	0330 0334 0338 0339 0340 0341 0342 0344 0352 0356 0358 0372 0893 0894 0895 0896 0897 0899 0900 0901 0903 0904 0924 0930 0932 0959 0993 1066 1067 1069 1070 1071
CYBERVISION	0805
CYTRON	0330 0334 0338 0339 0340 0341 0342 0344 0352 0356 0358 0372 0380 0893 0894 0895 0896 0897 0899 0900 0901 0903 0904 0924 0930 0932 0959 0993 1066 1067 1069 1070 1071
DAEWOO	0353 0354 0355 0380 0925
DANSAI	0351
DAYTRON	0925
DCE	0356
DENON	0389
DENVER	0381 0894 1051
DENZEL	0392
DESAY	0958
DIAMOND	0341
DIGIFRAME	0938
DIGIHOME	0350
DIGITOR	0382
DIGITREX	0357
DIGITRON	0386
DIGIX	0962
DIK	0356
DISNEY	0339
DiViDo	0380
DIVX	0932
DK DIGITAL	0356
DMTECH	0333 0351
DRAGON SYSTEMS	0356
DUAL	0330 0333 0334 0337 0338 0340 0341 0342 0344 0350 0352 0356 0358 0372 0383 0392 0924 0956 0984
DURABRAND	0333 0356 1019 1020 1073
DVD 1024	0929
E-BENCH	0341
ELTA	0333 0365 0382 0894
ELTAX	1051
EMERSON	0339 0380 1057

Device Brand Code List

ENCORE	0386
Energy Sistem	1048 1050 1081 1082 1083
ENZER	0392
ESA	0956
EUROLINE	0894
FARENHEIT	0960
FINLUX	0351 0357
FINTEC	0350
FISHER	0378
FUNAI	0339
GO-VIDEO	0338 0351 0367 0383 1059 1061
GE	0384
GERICOM	1064
GOLDEN SPHERE	0341
GOLDSTAR	0972
GOODMANS	0333 0350 0351 0382
Gowell	1049
GPX	0910
GRADIENTE	0823 0826
GRAETZ	0392
GRAN PRIX	0356
GRANDIN	0357
GRUNDIG	0333 0350 0376 0378 0380
H&B	0350
HAAZ	0341
HANSEATIC	0333 0351
HARMON/KARDON	0395
HB	1015
HCM	0894
HD DVD	0831
HE	0383
HITACHI	0160 0161 0170 0181 0350 0367 0368 0387 0392
HITEKER	0357
HOHER	0356
HOME ELECTRONICS	0383
HOMITA	0934 0935 0936 0937 0938
HOYO	0392
HYUNDAI	0351
ILO	0959
INITIAL	0384
INTEGRA	0374
INTERTRONIC	0893 0894
JATON	0392
JBL	0395
JDB	0383
JVC	0362 0400 0964 1058
JWIN	1072 1076

Device Brand Code List

KARCHER	0351
KAWASHI	0333
KENDO	0350 0356
KENNEX	0350
KENWOOD	0393
KISS	0392
KLH	0384
KONKA	0908 0909
KOSS	0358
LASONIC	0341
LAWSON	0341 0380
LECSON	0376
LENCO	0350 0356 0798
LENOXX	0931 0382
LG	0166 0183 0832 0833 0972
LIFE	0372 0993
LIFETEC	0330 0334 0338 0339 0340 0341 0342 0344 0352 0356 0358 0372 0893 0894 0895 0896 0897 0899 0900 0901 0903 0904 0924 0930 0932 0959 0993 1066 1067 1069 1070 1071
LIMIT	0341
LINN	0336
LITEON	0959 0982 1056 1059
LODOS	0350
LOGIX	0351 0380
LUMATRON	0332 0342 0350 0380 0383 1051
LUXMAN	0367
LUXOR	0350 0383
MAGNAVOX	0350 0362 0979 0980 0981
MANHATTAN	0350 0380
MARANTZ	0362 0981 1060
MARK	0350
MATSUI	0350 0357
MAXDORF	0894
MAXIM	0331 0350
MBO	0382 0383 0396
MEDION	0330 0334 0338 0339 0340 0341 0342 0344 0351 0352 0356 0358 0372 0833 0893 0894 0895 0896 0897 0899 0900 0901 0903 0904 0924 0930 0932 0959 0991 0992 0993 1066 1067 1069 1070 1071
MEMOREX	0339 0356 0920
MERIDIAN	0362
METZ	0350 0368

Device Brand Code List

MICROMAXX	0330 0334 0338 0339 0340 0341 0342 0344 0352 0356 0358 0372 0893 0894 0895 0896 0897 0899 0900 0901 0903 0904 0924 0930 0932 0959 0993 1066 1067 1069 1070 1071
MICROSOFT	0399
MICROSTAR	0330 0334 0338 0339 0340 0341 0342 0344 0352 0356 0358 0372 0893 0894 0895 0896 0897 0899 0900 0901 0903 0904 0924 0930 0932 0959 0993 1066 1067 1069 1070 1071
MINATO	0349
MINERVA	0380
MINTEK	0384
MIRROR	0349
MITSUBISHI	0350 0366
MONYKA	0392
MTLOGIC	1062
MUSTEK	0383
MYSTRAL	0356
NAD	0394
NAKAMICHI	0398
NEOTEK	0386
NEUFUNK	0392
NEVIR	0356
NEXXTECH	0932 0954 0955 0956 0794
NORCENT	0332 0944 0945 0948 0982
NORDMENDE	0356
NORIKO	0349
OCEANIC	1015
OKANO	0349 0362
OMNI	0382
ONKYO	0374
OPTIMUS	0368
ORION	0920
PACIFIC	0333 0350 0356
PACKARD BELL	0939 0940 1002 1052
PALSONIC	0357
PANASONIC	0168 0401 0970
PANDA	0351
PHILCO	0820
PHILIPS	0149 0159 0175 0182 0339 0362 0799 0979 0980 0981 0986 0997 1068
PHOCUS	1063 1064
PHONOTREND	0916
PIONEER	0153 0368 0968 0976
POLAROID	0949 0957
PORTLAND	0382
PRINZ	0356

Device Brand Code List

PRO2	0330 0334 0338 0339 0340 0341 0342 0344 0352 0356 0358 0372 0893 0894 0895 0896 0897 0899 0900 0901 0903 0904 0924 0930 0932 0959 1066 1067 1069 1070 1071
PROLINE	0333 0357 0376 0397
PROSCAN	0399
PROSON	0350
PROSONIC	0332 0341 0349
PROVISION	0381 1051
QUARTEK	1077
RAITE	0392
RCA	0384 0399
REDSTAR	0894
RELISYS	0895
REOC	0341
ROADSTAR	0350 0382 0383
RONIN	0397
ROWA	0384
SABA	0360
SAIVOD	0356
SAMPO	0341 0386 0895 1051
SAMSUNG	0170 0179 0338 0367 0919 0963
Samwin	1044 1045 1046
SANSUI	0341 0920
SANYO	0171 0333 0350 0378
SCAN	0380
SCHAUB LORENZ	0894 1015
SCHNEIDER	0333 0350 0351 0352 0356 0380 0894
SCHWAIGER	0349
SCIENTIFIC LABS	0341
SCOTT	0357
SEG	0341 0350 0392
SHARP	0155 0172 0350 0394 0831 1055
SHERWOOD	0391
SHINCO	0384
SHINSONIC	0384
SILVA	0894
SILVA SCHNEIDER	0356
SILVERCREST	0341 1000 1007 1009 1011
SINGER	0341 0382
SKYMASTER	0154 0186 0382 0383
SM	1079 1080 1084
SM ELECTRONIC	0341 0382 0383
SM-021	1078
SMART	0350 0380
SONY	0165 0178 0402 0987 0988 0989
SOUNDMASTER	0341

Device Brand Code List

SOUNDMAX	0341
SOUNDSTORM	0330
SOUNDWAVE	0351
STRONG	0350
SUNGALE	0953
SUPERVISION	0382 0383
SVA	0349
SYLVANIA	0339
SYNN	0341
TANDBERG	0350
TANGENT	1051
TARGA	0959 0972 0991 0996 1001 1074
TCM	0330 0333 0334 0338 0339 0340 0341 0342 0344 0352 0356 0358 0372 0924 0930 0932 0994
TEAC	0333 0341 0368 0384
TECHNICS	0399
TECHNIKA	0356
TECHWOOD	0350 0394
TECO	0895
TEDELEX	0382
TELEDEVICE	1051
TELEFUNKEN	0333 0894
TELETECH	0350
TENSAI	0382
TERAPIN	0943
TEVION	0093 0330 0334 0337 0338 0339 0341 0342 0344 0352 0356 0358 0372 0890 0894 0895 0896 0897 0899 0900 0901 0903 0904 0917 0918 0924 0930 0932 0959 0966 1064 1065 1066 1067 1069 1070 1071
THETA DIGITAL	0368
THOMSON	0360 0399
TINY	1051
TOKAI	0392 0894
TOKIWA	0380
TOSHIBA	0159 0184 0362 0920 0973 0990 0995
TRANS-CONTINENTS	0356 1051
TRANSONIC	0357
TREDEX	0941
TRUTECH	1075
TV project	1085
UMAX	0382
UNITED	0333 0348 0357 0894
UNIVERSUM	0333 0350
Uptek	1086
VENTURER	0333

Device Brand Code List

VESTEL	0350 0793
VIETA	0380
VOXSON	0356 0382 0383
WALKVISION	0384
WELKIN	0356
WESTAR	0350
WHARFEDALE	0341 0349 0376 0380
WILSON	0356
X-BOX	0399
XENIUS	0358
XLOGIC	0341
XMS	0894
YAKUMO	0357 1072
YAMAHA	0388 0796 0979 0980
YAMAKAWA	0382 0392 0397
Yudafu	1047
YUKAI	0383

DVR

APEX	0911
ASPIRE	0952
BLUE NOVA INTERNATIONAL	1051
COBY	1051
CYBERHOME	0912
CYBERMAXX	0895 0959 1071
CYTRON	0895 0959 1071
DENVER	1051
ELTAX	1051
EMERSON	1057
GO-VIOEO	0383 1059 1061
HB	1015
HITACHI	0387
ILO	0959
JVC	1058
LIFETEC	0895 0959 1071
LITEON	0959 1056 1059
LUMATRON	1051
MAGNAVOX	0979 0980
MEDION	0895 0959 1071
MICROMAXX	0895 0959 1071
MICROSTAR	0895 0959 1071
MUSTEK	0383
OCEANIC	1015
PACKARD BELL	0940 1052
PHILIPS	0979 0980 0986 1068

Device Brand Code List

PHOCUS	1063
PRO2	0895 0959 1071
PROVISION	1051
SAMPO	1051
SCHAUB LORENZ	1015
SHARP	1055
SONY	0987 0988 0989
TANGENT	1051
TARGA	0959 0991 0996
TELEDEVICE	1051
TEVION	0890 0895 0959 1065 1071
THOMSON	0360
TINY	1051
TOSHIBA	0362 0973 0990
TRANS-CONTINENTS	1051
YAMAHA	0979 0980

VCR

AIWA	0231 0233 0291
AKAI	0236 0238 0239 0300 0307 0329
AKIBA	0275
AKURA	0244 0275
ALBA	0233 0245 0247 0250 0275
AMBASSADOR	0250
AMSTRAD	0231 0253 0254
ANITECH	0275
APEX	0949
ASA	0257
ASUKA	0231 0257 0275
BAIRD	0231 0245 0258 0259
BASICLINE	0233 0245 0250 0275
BAUR	0257 0263
BESTAR	0245 0250
BLACK PANTHER LINE	0245
BLAUPUNKT	0257 0262 0263 0271 0309 0325
BONDSTEC	0250
BRANDT	0303 0305
BROKSONIC	0277 0967
BUSH	0233 0245 0247 0275 0288
CATRON	0250
CGE	0231
CIMLINE	0233 0275
CLATRONIC	0250
CONDOR	0245 0250
CROWN	0245 0250 0275
CYBERCOM	0233 0262 0269 0291 0338

Device Brand Code List

CYBERMAXX	0233 0262 0269 0291 0338
CYTRON	0233 0262 0269 0291 0338
DAEWOO	0245 0250 0265 0319
DANSAI	0275
DANTAX	0233
DAYTRON	0245
DE GRAAF	0257
DECCA	0231 0257
DKANO	0233 0300
DUAL	0233 0257 0262 0291 0338
DUMONT	0231 0257 0258
ELTA	0275
EMERSON	0231 0301 0339
ESC	0245
ETZUKO	0275
FERGUSON	0259 0271 0278 0281 0294 0305
FIDELITY	0231
FINLANDIA	0257 0258
FINLUX	0231 0257 0258 0298
FIRSTLINE	0233 0265 0275 0298
FISHER	0258 0279
FLINT	0233
FORMENTI-PHEONIX	0257
FRONTECH	0250
FUJITSU	0231
FUNAI	0231 0339
GALAXY	0231
GBC	0275 0250
GEC	0257
GELOSO	0275
GENERAL	0250
GENERAL TECHNIC	0233 0262
GOLDHAND	0275
GOLDSTAR	0231
GOODMANS	0231 0245 0250 0259 0275 0282
GO-VIDEO	0338 0367
GRAETZ	0258
GRANADA	0240 0257 0258 0271
GRANDIN	0231 0245 0250 0275
GRUNDIG	0235 0257 0263 0271 0275 0286 0287 0288 0315
HAAZ	0233
HANSEATIC	0257
HCM	0275 0288
HINARI	0233 0275 0288 0301
HISAWA	0233
HITACHI	0231 0257 0268 0387 0389 0403 0413 0415 0420 0479 0519

Device Brand Code List

HYPSON	0233 0275
IMPEGO	0250
IMPERIAL	0231
INNOHIT	0245 0250 0257 0275
INNOVATION	0233 0262 0291
INTERFUNK	0257 0258
INTERVISION	0231
IRRADIO	0275
ITT	0258 0292
ITV	0245
JVC	0294 0295 0400
KARCHER	0257
KENDO	0233 0236 0245 0250 0265 0300
KISUI	0275
KORPEL	0275
LENCO	0245
LEYCO	0275
LG	0231 0261 0389 0404 0413 0416 0468 0497 0512
LIFE	0291
LIFETEC	0233 0262 0269 0291 0338
LOEWE	0257 0262 0267 0271 0325
LOGIK	0275
LUMATRON	0245
LUXOR	0258 0281 0298
MAGNASONIC	0258
MAGNAVOX	0285
MAGNUM	0291
MANESTH	0265 0275
MARANTZ	0257 0271 0281 0299
MATSUI	0233 0301
MEDIATOR	0257
MEDION	0233 0262 0269 0291 0338
MELECTRONIC	0231
MEMOREX	0231 0240 0258 0279
MEMPHIS	0275
METZ	0262 0263 0267 0271 0325
MICROMAXX	0233 0262 0269 0291 0338
MICROSTAR	0233 0262 0269 0291 0338
MIGROS	0231
MINERVA	0263 0271
MITSUBISHI	0231 0257 0289 0294 0298
MULTITECH	0231 0250 0257 0275
MURPHY	0231
NATIONAL	0262
NEC	0294 0299
NECKERMANN	0257 0301
NEI	0257

Device Brand Code List

NESCO	0275
NIKKAI	0250
NOKIA	0240 0258 0292 0300 0307
NORDMENDE	0294 0303 0305
OCEANIC	0231 0240
ORION	0233 0234 0301
ORSON	0231
OSAKI	0231 0275
OTTO VERSAND	0257
PALLADIUM	0027 0275 0300
PANASONIC	0262 0267 0314 0321 0325 0412 0970
PATHE CINEMA	0301
PERDIO	0231
PHILCO	0299
PHILIPS	0235 0242 0257 0271 0286 0315 0327 0385 0428 0484 0503
PHONOLA	0257
PIONEER	0257 0294
POLAROID	0949
PORTLAND	0245 0250
PRINZ	0231
PRO2	0233 0262 0269 0291 0338
PROFEX	0275
PROLINE	0231 0288
PROSONIC	0233 0245
PYE	0257
QUARTZ	0258
QUELLE	0231 0257 0258 0263 0271 0301
RADIOLA	0257
RFT	0250 0257
ROADSTAR	0245 0275
SABA	0245 0281 0303 0305
SAISHO	0233 0275 0301
SALORA	0258 0292 0298
SAMSUNG	0312 0338 0424 0466 0499 0963
SAMURAI	0250
SANSUI	0244 0294 0920
SANYO	0258 0279 0284 0434
SBR	0257
SCHNEIDER	0231 0233 0245 0250 0257 0265 0275
SCNAUBLORENZ	0231 0258
SEG	0275
SEI-SINUDYNE	0257
SENTRA	0250
SETRON	0275
SHARP	0240 0281 0328 0427
SHINTOM	0258 0275
SIEMENS	0258 0263 0271

Device Brand Code List

SINUDYNE	0257
SOLAVOX	0250
SONOKO	0245
SONOLOR	0240
SONY	0251 0308 0309 0310 0313 0402 0463 0500
STANDARD	0245
STRONG	0244
SUNKAI	0233
SUNSTAR	0231
SUNTRONIC	0231
SUNWOOD	0275
SYLVANIA	0231 0339
TAISHO	0233
TANDBERG	0263
TASHIKO	0231 0240
TATUNG	0231 0257
TCM	0233 0262 0269 0291 0338
TEC	0250
TECHNICS	0262
TELEFUNKEN	0280 0294 0295 0303 0305
TENOSAL	0275
TENSAI	0231 0275
TEVION	0233 0262 0269 0291 0338
THOMSON	0242 0245 0294 0295 0305 0326
THORN	0258 0301
TIVO	0242
TOKAI	0275
TONSAI	0275
TOSHIBA	0257 0265 0291 0320 0362 0403 0420 0429 0469 0487 0500 0516
TOWADA	0275
TOWIKA	0275
TRIUMPH	0301
TVA	0250
UNITED QUICK STAR	0245
UNIVERSUM	0231 0235 0239 0253 0257 0263 0271 0315
VICTOR	0294 0295
VIDEON	0233 0262
YAMISHI	0275
YOKAN	0275
YOKO	0250 0275

AUX/TUNER/TAPE

AIWA	0377 0773
AUDIOVOX	0774
COBY	0948

Device Brand Code List

CAR RADIO	0861
CDR	0675 0847
CENTRUM	0692 0927
COBY	0769
COUNTRYMAN	0869
CRITERION	0344 0775
CURTIS	0948
CYBERCOM	0334 0344 0372 0775 0841 0704 0745 0808 0858
CYBERLINK	1002
CYBERMAXX	0334 0344 0372 0704 0745 0775 0811 0812 0841 0896 0993 1066 1069
CYTRON	0334 0344 0372 0704 0745 0775 0778 0808 0811 0812 0841 0858 0993 1069
DBS	0845
DENON	0779 0780 0781
DIGITAL DECOR	0790
DIGITAL LIVING	0789
DUAL	0334 0344 0372 0704 0745 0775 0797 0841 0858
DYNEX	0774
E-BENCH	0811
ECHOSTAR	0657
ELTA	0667 0668 0745
FISHER	0378
FUNK	0871
GERICOM	0443
GRUNDIG	0707 0727 0729
HARMON/KARDON	0681 0682
HAUPPAUGE	0482 0834
HOME AUTOMATION	0998
INSIGNIA	0783
INTERTRONIC	0811
iPOD	0884
JVC	0964
KODAK	0755 0776
LENOXX	0931
LFETEC	0704 0745 0808 0811 0812 0858
LG	0972
LIFE	0993
LIFETEC	0334 0344 0372 0775 0841 0993 1066 1069
LINN	0857
MAGNAVOX	0729
MARANTZ	0727 0729
MARMITEK	0641
MEDIA RECEIVER	0446
MEDION	0334 0344 0372 0704 0745 0775 0808 0811 0812 0841 0993 1066 1069

Device Brand Code List

MEMOREX	0767
MICROMAXX	0334 0344 0372 0704 0740 0775 0808 0811 0812 0858 0993 1066 1069 0775 0841
MICROSTAR	0334 0344 0372 0704 0745 0775 0778 0808 0811 0812 0841 0993 1066 1069
Multi sender	1043
NAD	0735 0738 0800
NELLTECH	0803 0811
NORCENT	0772 0948
NOW TV	0837
NUVO	0864
ONKYO	0784 0792
PACKARD BELL	1002
PANASONIC	0542
PANDIGITAL	0764 0790
PARDYLIGHT BOX	0872
PHILIPS	0727 0729
PHOTOSHARE	0766
PINNACLE	0528 0530 0560 0599 0835
PIONEER	0968 0976
POLAROID	0763 0785 0790
PREMIERE	0542
PRO2	0334 0344 0372 0704 0745 0775 0808 0811 0812 0841 0858 1066 1069
ROYAL	0764
SAMSUNG	0768 0919
SANSUI	0727 0729
SCHNEIDER	0791
SHERWOOD	0782
SILVERCREST	0811 0829 0868
SKARDIN	0870
SMARTPARTS	0761 0790
SONY	0739 0740 0741 0756 0757 0758 0759 0760
SONY NETWORK	0446
TARGA	0972 1074
TCM	0334 0344 0704 0745 0775 0806 0808 0824 0825 0841 0858
TEAC	0796
TECHNICS	0777 0786 0788
TEVIGN	0704 0745 0775 0808 0811 0812 0815 0817 0821 0822 0841 0858
TEVION	0334 0344 0372 0423 0650 0775 0917 0918 0993 1066 1069
THOMSON	0603 0842
TRUTECH	0765
XANTECH	0867
YAMAHA	0724 0770 0771
YUNG FU	0880

Device Brand Code List

CD/LD

ADCOM	0848
AKAI	0853 0854 0855
ALBA	0856
ARCAM	0732
AWA	0849 0850
BESTAR	0859
BSR	0860
BUSH	0661
CARRERA	0663
CLASSIC	0807
CONDOR	0860
CYBERCOM	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0818 0843
CYBERMAXX	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0818 0843
CYTRON	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0818 0843
DENON	0252 0318 0666
DUAL	0668 0675 0730 0744 0745 0747 0801 0802 0803 0843 0848
E-BENCH	0811
ELTA	0667 0668 0745
EMERSON	0848 0859
FISHER	0669
GENEXXA	0671 0672 0673 0675 0677 0859
GOLDSTAR	0663
GOODMANS	0679
GRUNDIG	0318 0680 0732
HARMON/KARDON	0683
HITACHI	0685 0686 0848
INNOVATION	0730 0744 0745 0747
JVC	0687
KENWOOD	0669 0688 0689 0690
LG	0663
LIFETEC	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0818 0843
LINN	0732
LUXMAN	0691
MAGNUM	0730 0744 0745 0747
MARANTZ	0695 0732
MATSUI	0732
MEDION	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0818 0843
MEMOREX	0677 0848 0859

Device Brand Code List

MERIDIAN	0732
MICROMAXX	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0818 0843
MICROMEGA	0732
MICROSTAR	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0818 0843
MISSION	0732
MITSUBISHI	0318
NAD	0318 0671 0733 0735 0800
NAIM	0732
NAKAMICHI	0699 0700
NUVO	0866
ONKYO	0701 0702 0792
PANASONIC	0661 0705
PHILIPS	0706 0732 0847
PIONEER	0318 0673 0677
PRO2	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0843
PROTON	0732
QUAD	0732
REALISTIC	0675 0848 0859
ROADSTAR	0706 0708
ROTEL	0732
SABA	0848
SAE	0732
SAMSUNG	0768
SANSUI	0709 0710 0711 0732 0847
SCHNEIDER	0732 0860
SCOTT	0859
SHARP	0672 0712 0713 0714
SHERWOOD	0782
SILVERCREST	0811
SINGER	0803
SKYMASTER	0778
SONY	0671 0716 0718 0741 0748 0749 0750
TANDBERG	0732
TCM	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0824 0825 0843
TEAC	0795
TECHNICS	0705 0721 0787
TELEFUNKEN	0318 0848
TEVION	0668 0674 0675 0730 0744 0745 0747 0801 0802 0803 0807 0813 0814 0816 0818 0821 0822 0843
THEORIE & ANWENDING	0804
THOMSON	0842 0848
THORN	0322

Device Brand Code List

TOSHIBA	0722
UNIVERSUM	0732
VECTOR RESEARCH	0663
VICTOR	0687
WELLTECH	0675 0744 0811
YAMAHA	0712 0720 0725 0771
YORX	0708

《End》